

FP03 ShareCard



Mini USB Female:

To be connected with a USB cable or an adapter. (Mini USB Male-USB A MALE)




Card Reader Connector:

Support SD/MS/MMC memory cards.




USB A Female:

To be connected with other USB devices. (EX: USB Card Readers, USB Drives, Digital Cameras or MP3 Players)
To do dual directional data transfer.

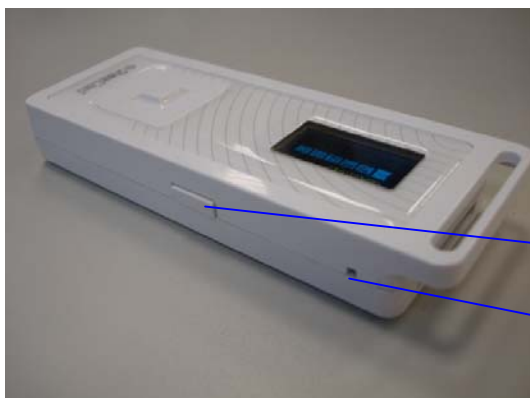

Power On/Off

Reset Button

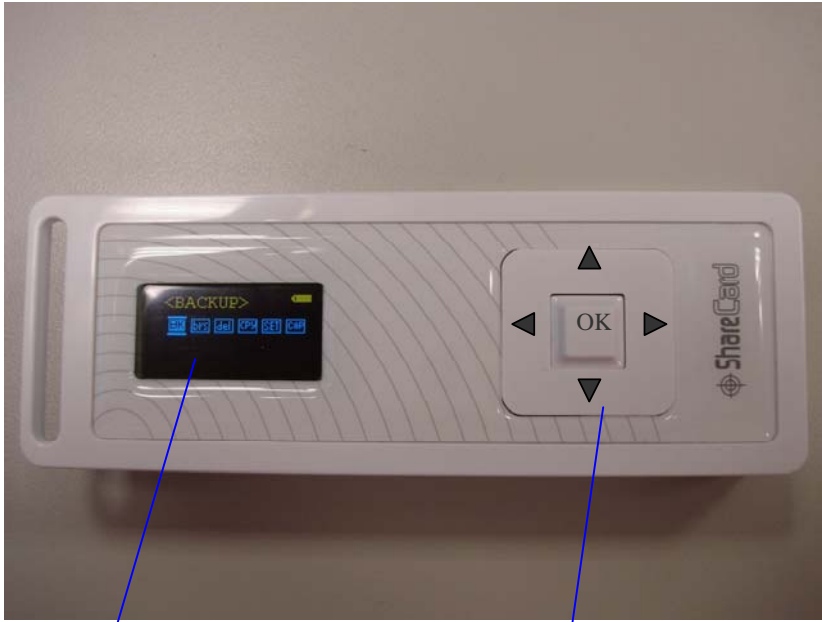

OLED Panel

Arrow Signs and "OK" will be printed as above.